

# Main- tenance


OF AN OILED HIRAM FLOOR

## TOOLS

- Paint roller or  
Polishing machine
- Beige or white pad
- Oil absorbing cloths

## RISK OF SELF IGNITION

Due to the risk of self-ignition any cloths that have been soaked in oil should be stored/disposed of in sealed containers or incinerated.

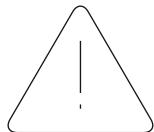

Maintenance Oil may be used for the maintenance of all oxidative oiled wood surfaces and is especially suitable for the regular maintenance of oiled wood floors. Can be applied manually with a polishing pad and by machine (floors larger than 8-10 m<sup>2</sup>) The maintenance oil is used for the first maintenance after installation as well as regular maintenance. The Maintenance oil revitalises oil-treated wood and makes the floors even more durable. It Gives the wood a beautiful, breathable surface, highlights the glow and grain structure of the wood.

Indoor climate labelled:

Ensures a good working environment during application.

Does not harm indoor air quality. Durability: 3 years

## PLEASE NOTE BEFORE OPENING

Indoor climate labelled



Consumption 30-40m<sup>2</sup>/l

Lasts for 3 years

## TREATMENT

---

Product, room and floor temperature should be between 15–35°C. Ensure good ventilation at all times during the application and drying time.

1. Clean the floor with WOCA Intensive Wood Cleaner. Leave the floor to dry for at least 8 hours. The floor must be completely dry.
2. Shake the container carefully. Apply approx. 1 dl oil per 4 m<sup>2</sup> with pad, short-haired paint roller, cotton cloth or use polishing machine for large surfaces.
3. It is important that the Maintenance Oil is carefully polished into the wood. Continue polishing until the wood appears saturated and the surface looks uniform.
4. Wipe the floor with clean, dry cotton cloths before proceeding with the next section. The floor should not appear wet and there should not be any excess oil left on the surface after polishing. Continue stepwise till the floor has been finished

When polished with the polishing machine the floor will be pre-hardened after approx. 4 hours at 20°C and may cautiously be taken into use. Manually polished floors may be taken into use after 24 hours. Do not expose the floor to water during hardening time of 3 days.